



RubINETTERIE Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

GLadio

INSTALLATION, USE & MAINTENANCE MANUAL



Year 2021	Rev. 1
-----------	--------

Product Description

- >> GLADIO is a new generation of knife gate valve, specifically designed for use on Slurry tankers, Sewage cleaning tanks, and Biogas plants.
- >> To offer maximum versatility in installation, GLADIO is equipped as standard with a double flange, one for square agri flange connection (Agristandard) and one DIN PN 10, or ANSI 150 for the American market.
- >> As a result of its special design, GLADIO is a 'non-clogging' gate valve and can therefore be installed in any position.
- >> Large self-cleaning seat.
- >> Safety: GLADIO is equipped with a robust protective casing, which completely isolates the moving parts of the gate valve.
- >> Stainless steel screws and tie rods to prevent corrosion.
- >> Equipped with open / closed position indicator.
- >> Extremely maintenance-friendly, all parts are easily replaceable once worn.
- >> GLADIO knife gate valves are partially bi-directional, i.e. they are shut-off devices with a preferential flow direction indicated by an arrow on the body.
Flow through the gate valve in the preferential direction can be blocked up to the Nominal Pressure (PN), while reverse flow can be blocked up to a maximum pressure of one third of the Nominal Pressure.

Certifications & Standards

Compliance with the following standards:

>> Directive ATEX 2014/34/UE Items Riv 122, Riv 123, Riv 132, Riv 133
>> Directive PED 2014/68/UE
>> Legislative Decree Nr.26 dated 15 February 2016

Handling

Previously check that all lifting devices are suitable for the weight of the gate valve.
In case of heavy products, always use a pair of eyebolts screwed into the flange holes or alternatively use a lifting belt wrapped around the central part of the body.

 The products must be handled by properly trained staff; the lifting hooks and/or belt must be used in accordance with the load limits indicated for them and following carefully the manufacturers' instructions.

 Never try to lift the gate valve from the control device (handwheel or one of several actuator types) or by inserting a belt inside the fluid channel after lifting the wedge.
These actions can often result in damages to the gate valve and are potentially dangerous for the handling operator

Storage

In case of long-term storage, it is recommended to store the gate valves and their components in a dry and safe place - preferably in a wooden or cardboard box in order to protect them from damage, dust and direct sunlight, max. temperature: 40°C / 100°F

Installation

-  The product must be installed by skilled staff equipped with appropriate safety equipment (gloves, safety shoes, glasses, etc.)
 The plant must be secured, depressurized and discharged from fluids.

CONNECTIONS:

Gate valves from DN 100 to DN 200 have a double flange connection:

- >> By square agri flange (**Agristandard**) with No.4 blind holes M12 and flange UNI EN1092-1 Type11 PN10 without grooving.

Or alternatively, for the American

- >> By square agri flange (**Agristandard**) with No.4 blind holes M12 and ASME B16.5 Cl.150 Welding Neck Flange (ANSI150) without grooving.

DN 250 has a single flange connection:

- >> UNI EN1092-1 Type11 PN10 without grooving.

Or alternatively, for the American

- >> ASME B16.5 Cl.150 Welding Neck Flange (ANSI150) without grooving.

Tables reporting screws size to be used for installation and related tightening torques:

Flange / Flanges UNI EN1092-1 Type11 PN10							
DN	Vite Testa Esagonale Hexagonal Head screws	Qta Qty	Torque	Vite Prigioniera Stud Bolt	Qta Qty	Torque	Torque
100	M16 x 120	4	80Nm	M16 x 55	8	80Nm	60Nm
125	M16 x 120	4	80Nm	M16 x 55	8	80Nm	60Nm
150	M20 x 130	4	90Nm	M20 x 65	8	90Nm	70Nm
200	M20 x 140	4	90Nm	M20 x 70	8	90Nm	70Nm
250	M20 x 150	4	90Nm	M20 x 75	16	90Nm	70Nm

Flange quadre / Square Flanges "Agristandard"			
DN	Vite Prigioniera Stud Bolt	Qta Qty	Torque
100	M12 x 45	8	50Nm
125	M12 x 45	8	50Nm
150	M12 x 45	8	50Nm
200	M12 x 45	8	50Nm



Flange / Flanges ASME B16.5 Cl.150 Welding Neck (ANSI150)							
DN	Vite Testa Esagonale Hexagonal Head screws	Qta Qty	Torque	Vite Prigioniera Stud Bolt	Qta Qty	Torque	Torque
100	5/8UNC x 4"3/4	4	80Nm	5/8UNC x 2"1/2	8	80Nm	60Nm
125	5/8UNC x 4"3/4	4	80Nm	5/8UNC x 2"1/2	8	80Nm	60Nm
150	3/4UNC x 5"1/2	4	90Nm	3/4UNC x 2"3/4	8	90Nm	70Nm
200	3/4UNC x 6"	4	90Nm	3/4UNC x 3"	8	90Nm	70Nm
250	7/8UNC x 7"	4	100Nm	7/8UNC x 3"1/4	16	100Nm	77Nm

Flange quadre / Square Flanges "Agristandard"			
DN	Vite Prigioniera Stud Bolt	Qta Qty	Torque
100	M12 x 45	8	50Nm
125	M12 x 45	8	50Nm
150	M12 x 45	8	50Nm
200	M12 x 45	8	50Nm



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

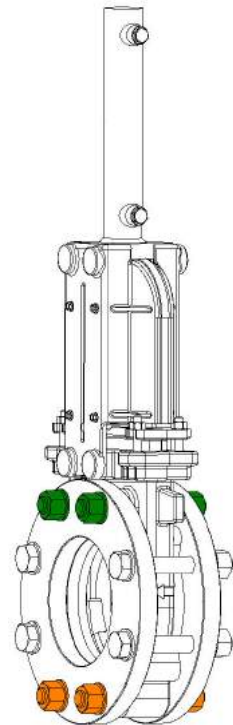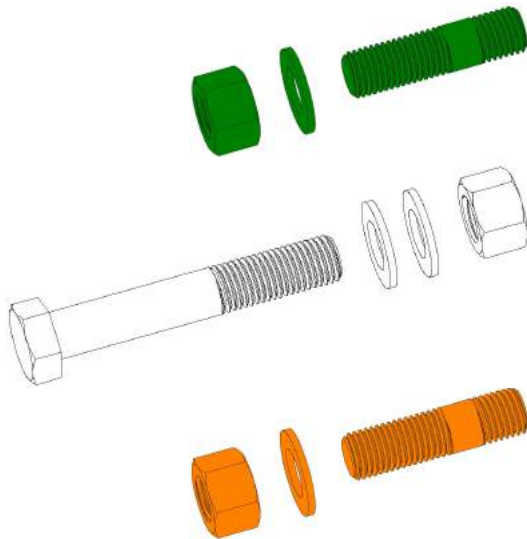

TO INSTALL THE PRODUCT APPROPRIATELY, PROCEED AS FOLLOWS:

1. The pipe must be clean.
2. The pipe flanges must have clean and undamaged sealing surfaces, free from radial scratches, bumps or other damage.
3. The inside of the body, sealing surfaces and blade of the gate valve shall be clean and free of scratches or other damage.
4. The seals between the gate valve and the flanges shall be clean and free from damage.
5. Check that the distance between the pipe flanges is adequate to insert the gate valve without damaging the surfaces and/or seals.
6. If the gate valve is to be installed in an ATEX environment, ensure that it is appropriately marked in accordance with the specifications of the installation site. Gate valves installed in an ATEX environment must have appropriate electrical continuity devices checked for effectiveness. Any accessories present on the gate valve (e.g. end-of-stroke sensors) must be appropriately marked in accordance with the specifications of the installation site.
7. Insert the gate valve between the flanges ensuring the correct position of the arrow indicating the preferred direction of flow.
8. Screw the studs (Green and Orange) to the valve body on both sides.
9. Couple the gate valve to the upstream pipe flange and apply the nuts without tightening them firmly, center the valve on the flange and tighten the nuts as per the torque values indicated above, making sure to cross-lock them for even fastening.
10. Repeat the same procedure for the installation of the downstream flange. Insert the (white) bolts between the flanges and tighten them as per the above torque values, making sure to cross-lock them for even fastening.

 **IMPORTANT!** both pipes must be securely fastened/clamped in such a way that their weight does not stress or damage the gate valve and to ensure that the latter is not stressed or damaged by any expansion and/or contraction of the pipes due to temperature variations.


After installation, open and close the gate valve without fluid inside the pipe to check for the smooth functioning.

Then, test the system under pressure, progressively increasing the pressure until it reaches its maximum value.



Should you notice a small amount of fluid leaking from the stuffing box during the first pressure test (**due to settling of the gasket pack**), this can be easily eliminated by tightening the nuts with a hexagonal spanner.

Tightening should be progressive (we suggest a quarter turn for each nut) following the specified sequences:

1 > 3 > 4 > 2

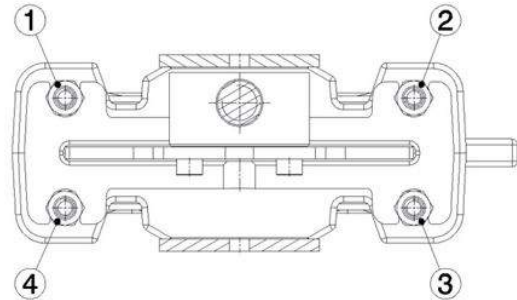


1 > 4 > 6 > 2 > 5 > 3

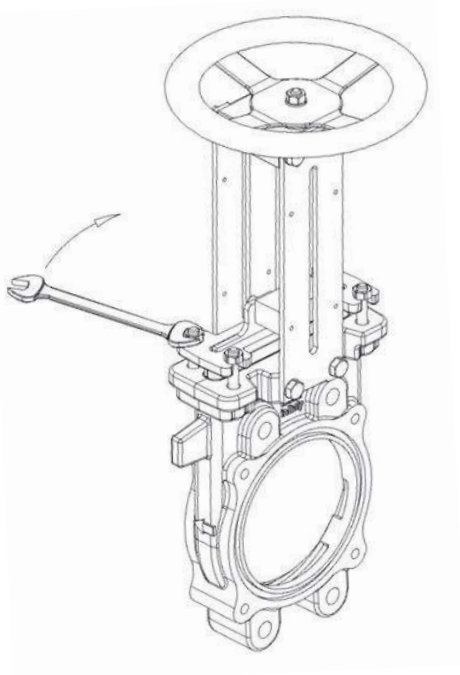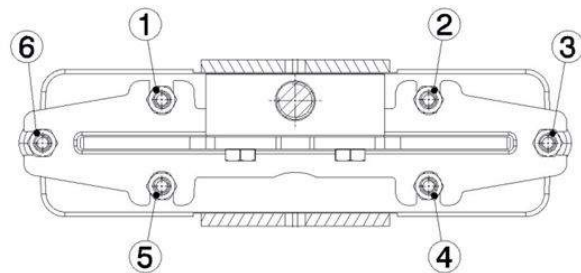

The GLADIO series gate valves have the advantage of being installable in any position.

! For models equipped with actuators, we recommend bracketing the upper part of the actuator to a support to avoid oscillations (see drawing).


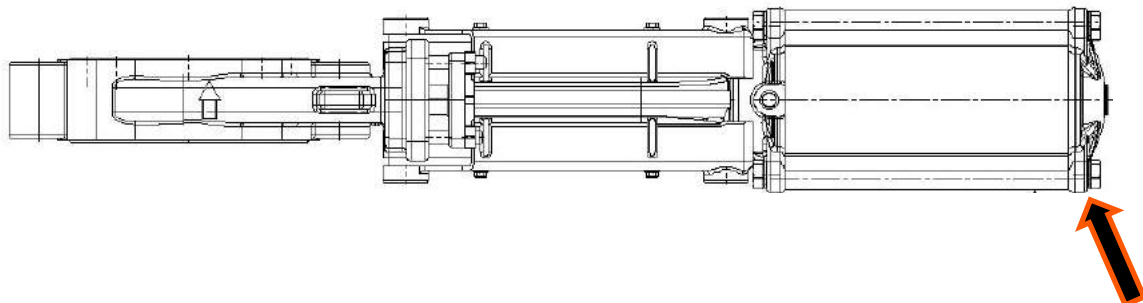


! **WARNING!** It is recommended to pay attention not to exceed the maximum working pressure indicated on the valve (PN) and stated in the technical documents. In case of doubt, please contact the RIV SpA Technical Service.

OPERATING LEVER ASSEMBLY:

Riv 120 & Riv 130 gate valves are opened and closed by means of Riv 149 operating lever, to be installed as described:

- 1) Drill one of the two studs as required, with a diameter of between 10.5 and 11.0 mm (must allow for the passage of an M10 screw).
After drilling, it is advisable to protect the exposed metal with a coat of paint or protect the part with a film of grease.

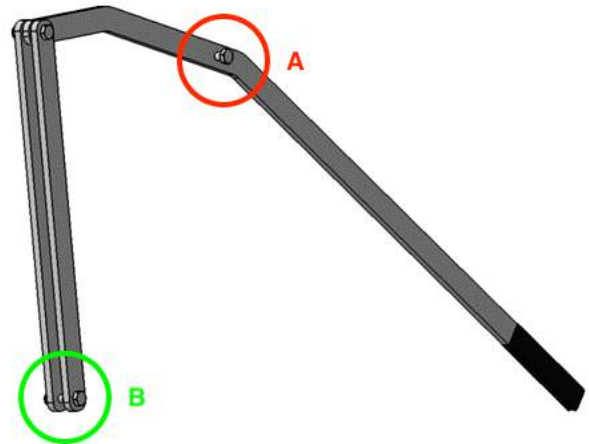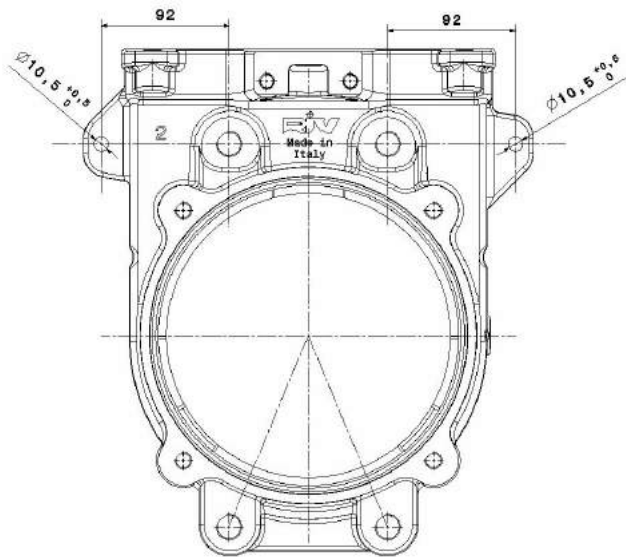

- 2) Assemble using the bolts supplied with the lever.
- 3) Fit the circled part "A" of the lever to the fork of the gate valve.
- 4) Fix the circled part "B" of the lever on the previously drilled valve body stud.



CAUTION: we recommend a "soft" tightening of the bolts, until a significant reduction in play is obtained, but without preventing the necessary rotational movement of the lever. Check that the self-locking ring of the nut is always in place.

Excessive
and bolts
the correct
levers.

tightening of nuts
could compromise
functioning of the





Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Electrical motor technical data

- >> Power supply: 12 V DC
- >> Power: 132 W
- >> Current: 11 A
- >> Motor protection grade: IP 69K
- >> Opening force: 6000 N
- >> Closing force: 6000 N
- >> Closing/opening speed: About 4mm/s
- >> Operating temperature: from -5°C to +45°C (from 23°F to 113°F)
- >> Operating temperature at full performance: from +5°C to +35°C (from 41°F to 95°F)
- >> Duty cycle: 25% at temperature of +25°C (77°F)
Pause time equal at least three times the operating time,
(Ex. 30 seconds ON followed by at least 90 seconds OFF)
Max. 2 minutes of continuous use
- >> Power & signals cable length: 5 m
- >> Analogic position feedback with potentiometer
- >> Integrated limit switches

Wiring:

- >> Power cable wiring 2,5mm² section
 - ✓ Knife gate valve closing:
Black cable to - **NEGATIVE** polarity
Red cable to + **POSITIVE** polarity
 - ✓ Knife gate valve opening:
Black cable to + **POSITIVE** polarity
Red cable to - **NEGATIVE** polarity
- >> Feedback cable wiring (potentiometer) 0,75mm² section

Black and White cable are the ends of the resistance

Red cable detects resistance variation

- ✓ The resistance detected between the Red and the Black cable increases by closing the knife gate valve and decreases by opening the knife gate valve.
- ✓ The resistance detected between the Red and the White cable decreases by closing the knife gate valve and increases by opening the knife gate valve.

The integrated limit switches are internally wired and shut-off the power when the actuator reaches one of the two mechanical stroke-end.

During normal operation of the gate valve the power must be shut-off, both in opening and closing position and in relation to the position signal received from the potentiometer.

The circuit must also provide two limitations of the current flow, both in opening and closing direction, that could shut-off the power if the motor absorption reaches the maximum acceptable level (11 Ampere).

Maintenance

RIV SpA shall not be held responsible for any damage to persons and/or property due to maintenance tasks performed incorrectly or using non-original parts.

Any modification to the product is expressly forbidden unless previously agreed and approved by RIV SpA Quality Service or Technical Service; in any case, this will result in the immediate forfeiture of warranty.

-  All maintenance works must be carried out by skilled staff using the appropriate safety equipment (gloves, safety shoes, glasses, etc.).
 The plant must be secured, depressurized and discharged from fluids.
 The operating fluid must be disposed of in compliance with any provisions of law.
 If necessary, flush the pipeline to ensure that it does not contain any potentially harmful fluid residues and/or vapours.

MAINTENANCE FOR ALL GATE VALVE MODELS

- >> Replacing the rubber seal seat, the threaded seat-retaining ring and the blade - this necessarily involves replacing the blade seal set.

The following spare parts are required for this maintenance operation:

- ✓ 1 Rubber seat seal Riv 9847
- ✓ 1 Threaded seat-retaining ring Riv 9848 (or Riv 9845 for gate valve dating back to before June 2019)
- ✓ 1 Riv 9818 blade (replace it, if necessary)
- ✓ 1 Set of Riv 9836 blade sealing gaskets (packing chamber gaskets).

DISASSEMBLY:


- a) Uninstall the gate valve from the system, wash it and clear it of any residue.
- b) If present, remove the two covers (item 19) by unscrewing the 8 screws (item 16).
- c) Remove one of the two brackets (item 17) by unscrewing the 4 screws (item 18).
 Once the gate valve control device (terminal block with fork, handwheel, actuator) has been adequately rested or supported, remove the second bracket (item 17) by unscrewing the other 4 screws (item 18).

For Riv 121 & Riv 131 models:

- d) Remove the nut (item 28) from the blade (item 2) by unscrewing the two screws (item 13). Set the operating unit aside temporarily for subsequent reassembly.

For all other models:

- e) Remove the two blade attachments (item 14) by unscrewing the two nuts (item 15) and then removing the two screws (item 13). Temporarily set aside the end block with fork or actuator for subsequent reassembly.
- f) Unscrew the Riv 9848 threaded seat-retainer ring (item 3) from its housing, or Riv 9845 if the gate valves were installed before June 2019; in this case, raise the ring locking tabs with a screwdriver; during this operation, take great care to avoid damaging the gate valve body.
- g) After unscrewing the 4 or 6 nuts (item 11) remove the stuffing box (item 9) by pulling it off the blade.
- h) Remove the worn gaskets from the packing chamber.
- i) Remove the blade (item 2) by pulling it out of the body.
- j) Remove the worn seat gasket (item 4).

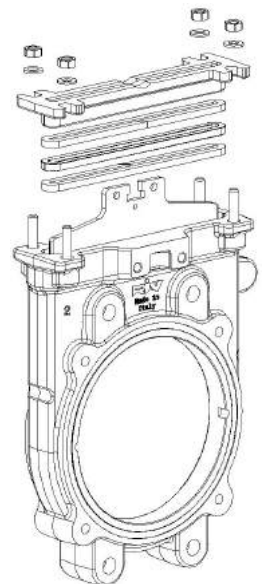


ASSEMBLY:

- k) Thoroughly clean the inside of the gate valve body and lubricate it along with the components before assembly.


For gate valves dating back to before June 2019:

- l) insert a new seat gasket Riv 9847 (item 4) and the fixing ring Riv 9845 (item 3) which must be locked by folding the 4 tabs in the locking groove using a hammer and a small chisel or a screwdriver.

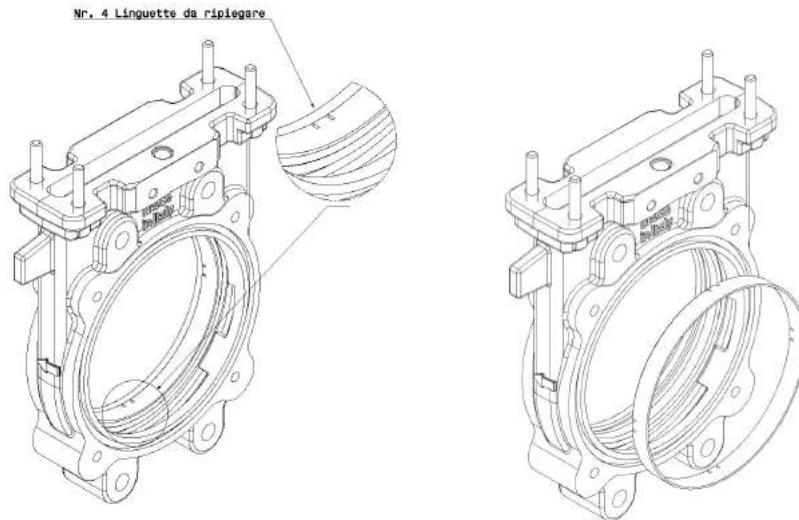

Models dating back to after June 2019:

- m) After inserting the blade and stuffing box, insert a new seat gasket Riv 9847 (item 4) on Riv 9848 (item 3) retaining ring and screw it in until it reaches the mechanical stop and tighten it firmly.

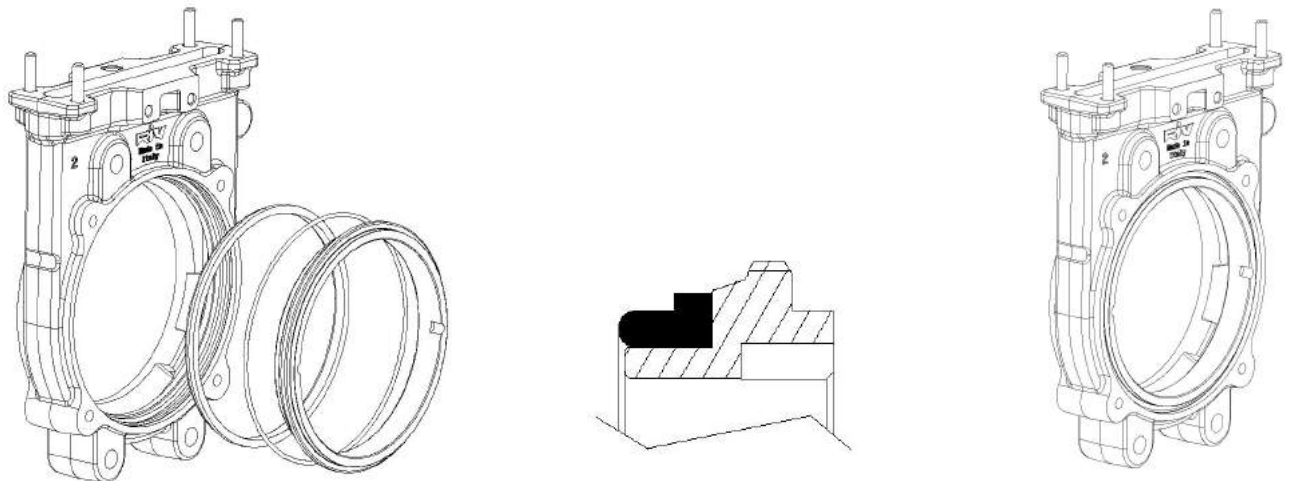

- n) Thoroughly clean the Riv 9818 blade (item 2) and check it for grooves, bumps or other damage. Lubricate it moderately and insert it into the gate valve body.
o) Insert the new set of Riv 9836 blade seals - the elastomer seal (item 7) must be positioned between the other two while the joints of the two seals (item 6) must be positioned on opposite sides.
p) Reassemble the gate valve, carrying out all the operations from "F" to "A" in reverse order.

 After any maintenance task, the gate valve must be tested as after the first installation before it is operational again.

Limitations of use

The products are designed for use in slurry tanker, sewage cleaning tanks and biogas plant applications. The fluids transported must be compatible with the metallic and non-metallic materials used in the gate valve. Any use with potentially clogging or aggressive fluids must be previously evaluated and approved by RIV Spa Quality Service or Technical Service.

Control units



Riv 149 Lever



Riv 162 Double-acting hydraulic jack Zinc-plated



Riv 164 Double-acting pneumatic jack



Riv 165 Double-acting pneumatic jack with position sensors




Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Components List

Riv 119

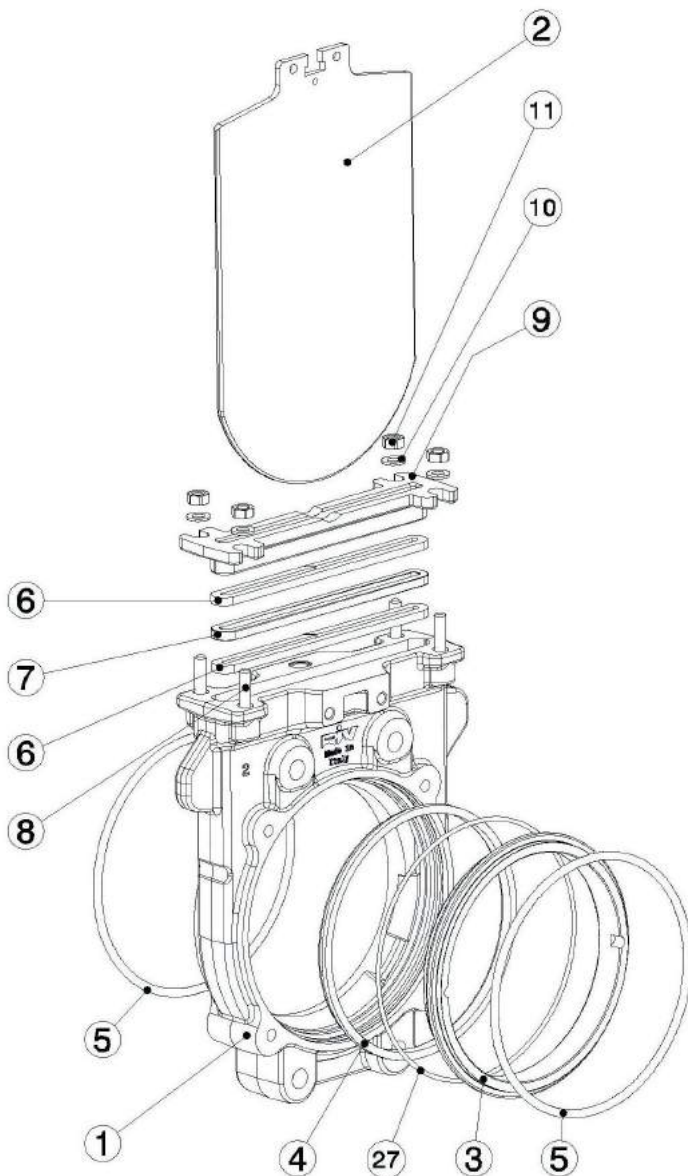


Item	Pos.	Size	Riv Code	Description	Material
	1	4"	CODFLGV91016	Corpo Body Gehäuse	Ghisa Cast iron Gusseisen
		5"	CODFLGV91018		
		6"	CODFLGV91019		
		8"	CODFLGV91020		
		10"	CODFLGV91021		
Riv 9818	2	4"	CNISLG091016	Lama Blade Platte	Acciaio inox Stainless steel Nirostahl
		5"	CNISLG091018		
		6"	CNISLG091019		
		8"	CNISLG091020		
		10"	CNISLG091021		
Riv 9848	3	4"	AFFGGLZ91016	Anello fermasede Locking ring Sitzring	Ghisa Cast iron Gusseisen
		5"	AFFGGLZ91018		
		6"	AFFGGLZ91019		
		8"	AFFGGLZ91020		
		10"	AFFGGLZ91021		
Riv 9847	4	4"	GUESLGG00016	Guarnizione sede Seat gasket Sitzdichtung	HNBR
		5"	GUESLGG00018		
		6"	GUESLGG00019		
		8"	GUESLGG00020		
		10"	GUESLGG00021		
Riv 9859	5	4"	GUOR7805B127	O-Ring flangia O-Ring for flange O-Ring für Flansch	NBR
		5"	GUOR7805B126		
		6"	GUOR7805B119		
		8"	GUOR7805B118		
		10"	GUOR7805B133		
Riv 9836	6	4"	GUBASLG00016	Baderna Gland packing Packung	Fibra Fibre Faser
		5"	GUBASLG00018		
		6"	GUBASLG00019		
		8"	GUBASLG00020		
		10"	GUBASLG00021		
	7	4"	GUOR7805B128	Guarnizione Gasket Dichtung	NBR
		5"	GUOR7805B129		
		6"	GUPBSLG00019		
		8"	GUPBSLG00020		
		10"	GUOR7805B132		
8		4"-5"-6"-8"-10"	BUTIS31KG004	Tirante Stud Bolzen	Acciaio inox Stainless steel Nirostahl
9		4"	PRBAGHV81016	Premibaderna Gland packing box Packungsmutter	Ghisa Cast iron Gusseisen
		5"	PRBAGHV81018		
		6"	PRBAGHV81019		
		8"	PRBAGHV81020		
		10"	PRBAGHV81021		
10		4"-5"-6"-8"	BURGRIN00008	Rondella Washer Beilagscheibe	Acciaio inox Stainless steel Nirostahl
		10"	BURGRIN00010		
11		4"-5"-6"-8"-10"	BUDN531A2004	Dado Nut Schraubenmutter	Acciaio inox Stainless steel Nirostahl
27		4"	GUOR7805B152	O-Ring	NBR
		5"	GUOR7805B153		
		6"	GUOR7805B149		
		8"	GUOR7805B150		



RubINETTERIE Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 120, Riv 130

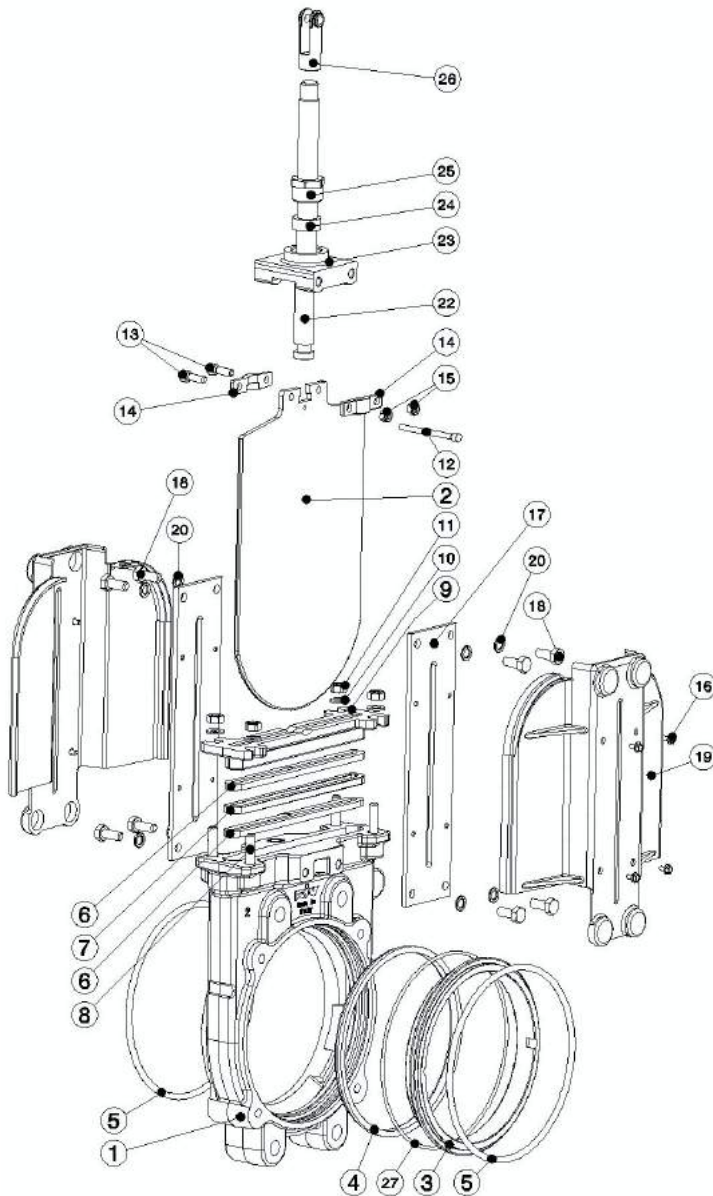


Item	Pos.	Size	Riv Code	Description	Material	
	1	4"	CODFLGV91016	Corpo Body Gehäuse	Ghisa Cast iron Gusseisen	EN JGL250
		5"	CODFLGV91018			
		6"	CODFLGV91019			
		8"	CODFLGV91020			
		10"	CODFLGV91021			
Riv 9818	2	4"	CNISLGG091016	Lama Blade Platte	Acciaio inox Stainless steel Nirostahl	AISI 304
		5"	CNISLGG091018			
		6"	CNISLGG091019			
		8"	CNISLGG091020			
		10"	CNISLGG091021			
Riv 9848	3	4"	AFFGGLZ91016	Anello fermasede Locking ring Sitzring	Ghisa Cast iron Gusseisen	EN JGL415
		5"	AFFGGLZ91018			
		6"	AFFGGLZ91019			
		8"	AFFGGLZ91020			
		10"	AFFGGLZ91021			
Riv 9847	4	4"	GUESLGG00016	Guarnizione sede Seat gasket Sitzdichtung	HNBR	
		5"	GUESLGG00018			
		6"	GUESLGG00019			
		8"	GUESLGG00020			
		10"	GUESLGG00021			
Riv 9859	5	4"	GUOR7805B127	O-Ring flangia O-Ring for flange O-Ring für Flansch	NBR	
		5"	GUOR7805B126			
		6"	GUOR7805B119			
		8"	GUOR7805B118			
		10"	GUOR7805B133			
Riv 9836	6	4"	GUBASLGG00016	Baderna Gland packing Packung	Fibra Fibre Faser	
		5"	GUBASLGG00018			
		6"	GUBASLGG00019			
		8"	GUBASLGG00020			
		10"	GUBASLGG00021			
	7	4"	GUOR7805B128	Guarnizione Gasket Dichtung	NBR	
		5"	GUOR7805B129			
		6"	GUPBSLGG00019			
		8"	GUPBSLGG00020			
		10"	GUOR7805B132			
8		4"-5"-6"-8"-10"	BUT1531KG004	Tirante Stud Bolzen	Acciaio inox Stainless steel Nirostahl	AISI 304
9		4"	PRBAGHV81016	Premiabaderna Gland packing box Packungsmutter	Ghisa Cast iron Gusseisen	EN JGL250
		5"	PRBAGHV81018			
		6"	PRBAGHV81019			
		8"	PRBAGHV81020			
		10"	PRBAGHV81021			
10		4"-5"-6"-8"-10"	BURGRIN00008	Rondella Washer Beilagsscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304
11		4"-5"-6"-8"-10"	BUDN531A2004	Dado Nut Schraubenmutter	Acciaio inox Stainless steel Nirostahl	AISI 316
12		4"-5"-6"-8"-10"	BUBR531K0048	Indicatore Position indicator Stellungsanzeige	Acciaio Steel Stahl	
13		4"-5"-6"-8"	BUBR531K0071	Vite Screw Schraube	Acciaio Steel Stahl	AISI 304
		10"	BUTE531K0006			
14		4"-5"-6"	ATCNLSLG71019	Attacco lama Blade connection Plattebefestigung	Ottone Brass Messing	CW617N
		8"	ATCNLSLG71020			
		10"	ATCNLSLG91021			
15		4"-5"-6"-8"	BUAU316A4003	Dado Nut Schraubenmutter	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		10"	BUAU316A4005			
16		4"-5"-6"-8"-10"	BUTR531A2002	Vite Screw Schraube	Acciaio inox Stainless steel Nirostahl	AISI 304
17		4"	STFEVSLGG0016	Staffa Clamp Bügel	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		5"	STFEVSLGG0018			
		6"	STFEVSLGG0019			
		8"	STFEVSLGG0020			
		10"	STFEVSLGG0021			
18		4"-5"-6"-8"	BUTE531K0004	Vite Screw Schraube	Acciaio inox Stainless steel Nirostahl	AISI 304
		10"	BUTE531K0005			
Riv 9846	19	4"	CASPSLGG00016	Carter Casing Schützer	PP	
		5"	CASPSLGG00018			
		6"	CASPSLGG00019			
		8"	CASPSLGG00020			
		10"	CASPSLGG00021			
20		4"-5"-6"-8"	BURGRIN00008	Rondella Washer Beilagsscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304
		10"	BURGRIN00010			
Riv 9829	22	4"	STSS30040016	Asta Stem Hubstange	Ottone Brass Messing	CW614N
		5"	STSS30040018			
		6"	STSS30040019			
		8"	STSS30040020			
		10"	STSLG0040021			
23		4"-5"-6"	TESSLGV91019	Testata Cap Oberteil	Ghisa Cast iron Gusseisen	EN JGL250
		8"	TESSLGV91020			
		10"	TESSLGV91021			
Riv 9840	24	4"-5"-6"	SPSS7E0HF000	Stoppa Tow packing Stopfbuchsichtung	Fibra Fibre Faser	
		8"	SPSS7E0HF002			
		10"	SPSS7E0HF002			
Riv 9844	25	4"-5"-6"	PSSS30171000	Premistoppa Stuffing-Box Stopfbuchsmutter	Ottone Brass Messing	CW614N
		8"	PSSS31191001			
		10"	PSSS31191001			
Riv 9854	26	4"-5"-6"-8"-10"	OMSS30171000	Forcella Fork Gabelkopf	Ottone Brass Messing	CW617N
27		4"	GUOR7805B152	O-Ring	NBR	
		5"	GUOR7805B153			
		6"	GUOR7805B149			
		8"	GUOR7805B150			



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 121, Riv 131

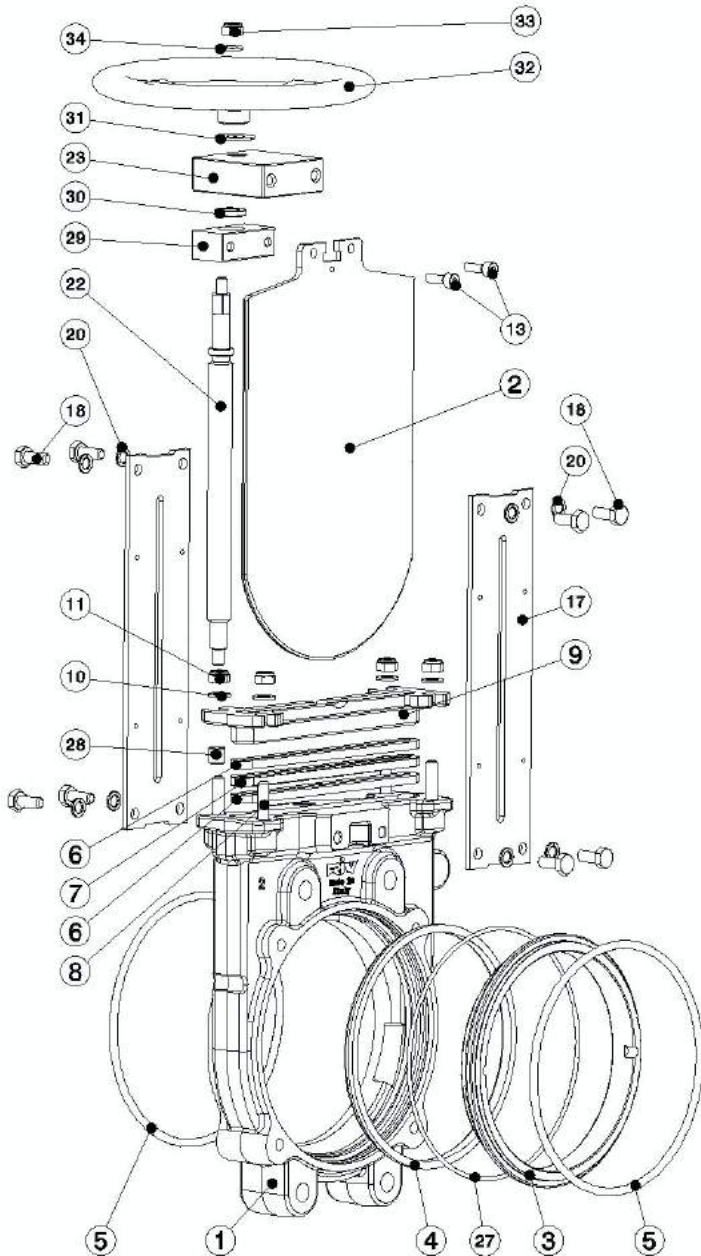


Item	Pos.	Size	Riv Code	Description	Material	
	1	4"	CODFLGV91016	Corpo Body Gehäuse	Ghisa Cast iron Gusseisen	EN JGL250
		5"	CODFLGV91018			
		6"	CODFLGV91019			
		8"	CODFLGV91020			
		10"	CODFLGV91021			
Riv 9818	2	4"	CNISLGG091016	Lama Blade Platte	Acciaio inox Stainless steel Nirostahl	AISI 304
		5"	CNISLGG091018			
		6"	CNISLGG091019			
		8"	CNISLGG091020			
		10"	CNISLGG091021			
Riv 9848	3	4"	AFFGGLZ91016	Anello fermasede Locking ring Sitzring	Ghisa Cast iron Gusseisen	EN JGL415
		5"	AFFGGLZ91018			
		6"	AFFGGLZ91019			
		8"	AFFGGLZ91020			
		10"	AFFGGLZ91021			
Riv 9847	4	4"	GUSESGLG00016	Guarnizione sede Seat gasket Sitzdichtung	HNBR	
		5"	GUSESGLG00018			
		6"	GUSESGLG00019			
		8"	GUSESGLG00020			
		10"	GUSESGLG00021			
Riv 9859	5	4"	GUOR7805B127	O-Ring flangia O-Ring for flange O-Ring für Flansch	NBR	
		5"	GUOR7805B126			
		6"	GUOR7805B119			
		8"	GUOR7805B118			
		10"	GUOR7805B133			
Riv 9836	6	4"	GUBASLGG00016	Baderna Gland packing Packung	Fibra Fibre Faser	
		5"	GUBASLGG00018			
		6"	GUBASLGG00019			
		8"	GUBASLGG00020			
		10"	GUBASLGG00021			
	7	4"	GUPBSLGG00016	Guarnizione Gasket Dichtung	NBR	
		5"	GUPBSLGG00018			
		6"	GUPBSLGG00019			
		8"	GUPBSLGG00020			
		10"	GUPBSLGG00021			
	8	4"-5"-6"-8"-10"	BUT1531K0004	Tirante Stud Bolzen	Acciaio inox Stainless steel Nirostahl	AISI 304
	9	4"	PRBAGHV81016	Premibaderna Gland packing box Packungsmutter	Ghisa Cast iron Gusseisen	EN JGL250
		5"	PRBAGHV81018			
		6"	PRBAGHV81019			
		8"	PRBAGHV81020			
		10"	PRBAGHV81021			
	10	4"-5"-6"-8"-10"	BURPIN000010	Rondella Washer Beilagscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304
	11	4"-5"-6"-8"-10"	BUDN631A2004	Dado Nut Schraubenmutter	Acciaio inox Stainless steel Nirostahl	AISI 316
	13	4"-5"-6"-8"	BUBR531K0071	Vite Screw Schraube	Acciaio Steel Stahl	AISI 304
		10"	BUTE531K0006			
	17	4"	STFEVSLGG0016	Staffa Clamp Bügel	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		5"	STFEVSLGG0018			
		6"	STFEVSLGG0019			
		8"	STFEVSLGG0020			
		10"	STFELSGLG0021			
	18	4"-5"-6"-8"	BUTE531K0004	Vite Screw Schraube	Acciaio inox Stainless steel Nirostahl	AISI 304
		10"	BUTE531K0005			
	20	4"-5"-6"-8"	BURGRIN00008	Rondella Washer Beilagscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304
		10"	BURGRIN00010			
Riv 9829	22	4"	STSLGVIND016	Asta Stem Hubstange	Acciaio inox Stainless steel Nirostahl	AISI 304
		5"	STSLGVIND018			
		6"	STSLGVIND019			
		8"	STSLGVIND020			
		10"	STSLGVIND021			
	23	4"-5"-6"-8"	TESLGVAVV000	Testata Cap Oberteil	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		10"	TESLGVAVZ021			
	27	4"	GUOR7805B152	O-Ring	NBR	
		5"	GUOR7805B153			
		6"	GUOR7805B149			
		8"	GUOR7805B150			
	28	4"-5"-6"-8"-10"	BOSLGS40000	Boccola Bush Büchse	Ottone Brass Messing	CW614N
	29	4"-5"-6"-8"	ATCNLSLGLV000	Chiocciola Wedge connection Keilbefestigung	Ottone Brass Messing	CW614N
		10"	ATCNLSLGLV021			
	30	4"-5"-6"-8"	BOSLGS40000	Rondella Washer Beilagscheibe	Ottone Brass Messing	CW614N
		10"	BOSLGS40021			
	31	4"-5"-6"-8"	ROSVSLG40000	Rondella Washer Beilagscheibe	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		10"	ROSVSLG40021			
	32	4"-5"	OMVOSLGG00001	Volantino handwheel Handrad	Acciaio Steel Stahl	
		6"-8"	OMVOSLGG00000			
		10"	OMVOSLGG00021			
	33	4"-5"-6"-8"	BUAU316A4004	dado Nut Schraubenmutter	Acciaio inox Stainless steel Nirostahl	AISI 316
		10"	BUAU316A4005			
	34	4"-5"-6"-8"	BURPIN000010	Rondella Washer Beilagscheibe	Acciaio inox Stainless steel Nirostahl	AISI 316
		10"	BURPIN000012			



RubINETTERIE Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 122 / 123, Riv 132 / 133

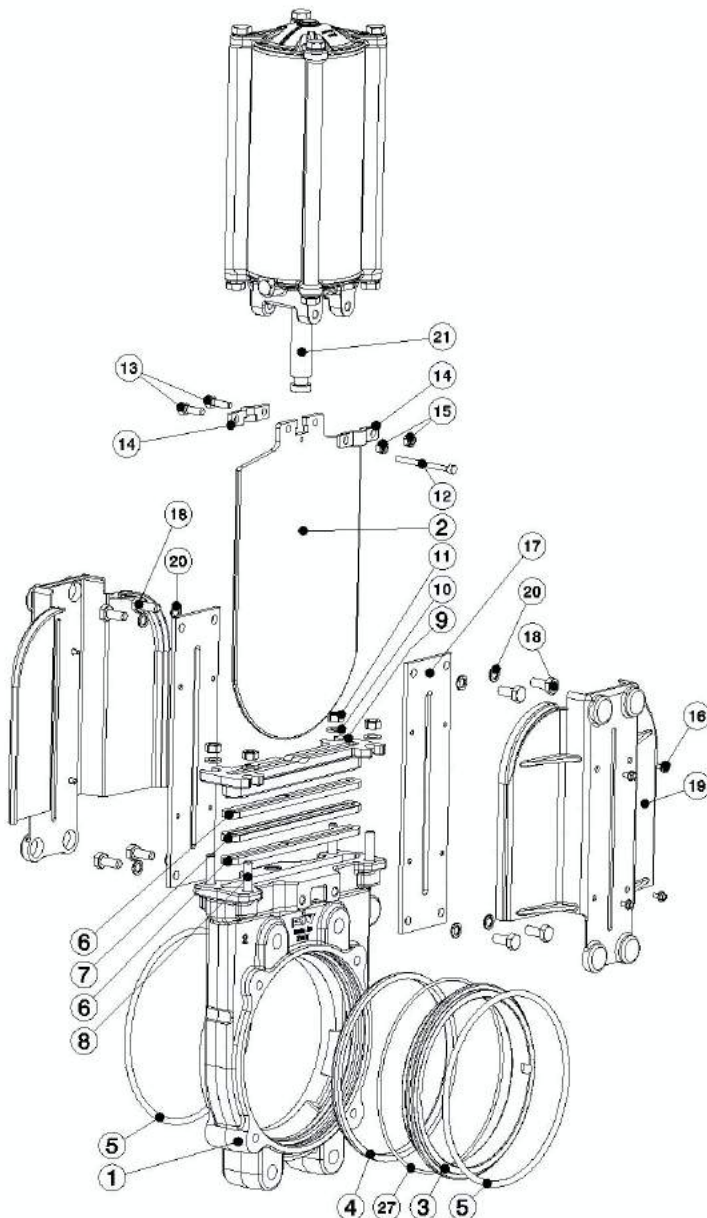


Item	Pos.	Size	Riv Code	Description	Material	
	1	4"	CODFLGV91016	Corpo Body Gehäuse	Ghisa Cast iron Gusseisen	EN JGL250
		5"	CODFLGV91018			
		6"	CODFLGV91019			
		8"	CODFLGV91020			
		10"	CODFLGV91021			
Riv 9818	2	4"	CNISLG091016	Lama Blade Platte	Acciaio inox Stainless steel Nirostahl	AISI 304
		5"	CNISLG091018			
		6"	CNISLG091019			
		8"	CNISLG091020			
		10"	CNISLG091021			
Riv 9848	3	4"	AFFGGLZ91016	Anello fermasede Locking ring Sitzring	Ghisa Cast iron Gusseisen	EN JGL415
		5"	AFFGGLZ91018			
		6"	AFFGGLZ91019			
		8"	AFFGGLZ91020			
		10"	AFFGGLZ91021			
Riv 9847	4	4"	GUSESLG00016	Guarnizione sede Seat gasket Sitzdichtung	HNBR	
		5"	GUSESLG00018			
		6"	GUSESLG00019			
		8"	GUSESLG00020			
		10"	GUSESLG00021			
Riv 9859	5	4"	GUOR7805B127	O-Ring flangia O-Ring for flange O-Ring für Flansch	NBR	
		5"	GUOR7805B126			
		6"	GUOR7805B119			
		8"	GUOR7805B118			
		10"	GUOR7805B133			
Riv 9836	6	4"	GUBASLG00016	Baderna Gland packing Packung	Fibra Fibre Faser	
		5"	GUBASLG00018			
		6"	GUBASLG00019			
		8"	GUBASLG00020			
		10"	GUBASLG00021			
	7	4"	GUOR7805B128	Guarnizione Gasket Dichtung	NBR	
		5"	GUOR7805B129			
		6"	GUPBSLG00019			
		8"	GUPBSLG00020			
		10"	GUOR7805B132			
8	4"-5"-6"-8"-10"	BUT1531KG004	Tirante Stud Bolzen	Acciaio inox Stainless steel Nirostahl	AISI 304	
9	4"	PRBAGHV81016	Premibaderna Gland packing box Packungsmutter	Ghisa Cast iron Gusseisen	EN JGL250	
		5"	PRBAGHV81018			
		6"	PRBAGHV81019			
		8"	PRBAGHV81020			
		10"	PRBAGHV81021			
10	4"-5"-6"-8"	BURGRIN00008	Rondella Washer Beilagscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304	
		10"				
11	4"-5"-6"-8"-10"	BUDN531A2004	Dado Nut Schraubenmutter	Acciaio inox Stainless steel Nirostahl	AISI 316	
12	4"-5"-6"-8"	BUBR531K0048	Indicatore Position indicator Stellungsanzeige	Acciaio Steel Stahl		
		10"				
13	4"-5"-6"-8"	BUBR531K0071	Vite Screw Schraube	Acciaio Steel Stahl	AISI 304	
		10"				
14	4"-5"-6"	ATCNLSG71019	Attacco lama Blade connection Plattebefestigung	Ottone Brass Messing	CW617N	
		8"				
		10"				
15	4"-5"-6"-8"	BUAL316A4003	Dado Nut Schraubenmutter	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt	
		10"				
16	4"-5"-6"-8"-10"	BUTR531A2002	Vite Screw Schraube	Acciaio inox Stainless steel Nirostahl	AISI 304	
17	4"	STFEVSLG0016	Staffa Clamp Bügel	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt	
		5"				
		6"				
		8"				
Riv 9846	19	4"	CASPSLG00016	Carter Casing Schützter	PP	
		5"	CASPSLG00018			
		6"	CASPSLG00019			
		8"	CASPSLG00020			
		10"	CASPSLG00021			
20	4"-5"-6"-8"	BURGRIN00008	Rondella Washer Beilagscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304	
		10"				
Riv 164	21	4"	50164000016	Cilindro pneumatico Pneumatic jack Pneumatischer Zylinder	Doppio effetto Double-acting Doppelwirkender	
		5"	50164000018			
		6"	50164000019			
		8"	50164000020			
		10"	50164000021			
27	4"	GUOR7805B152	O-Ring	NBR		
		5"				
		6"				
		8"				



RubINETTERIE Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 124, Riv 134

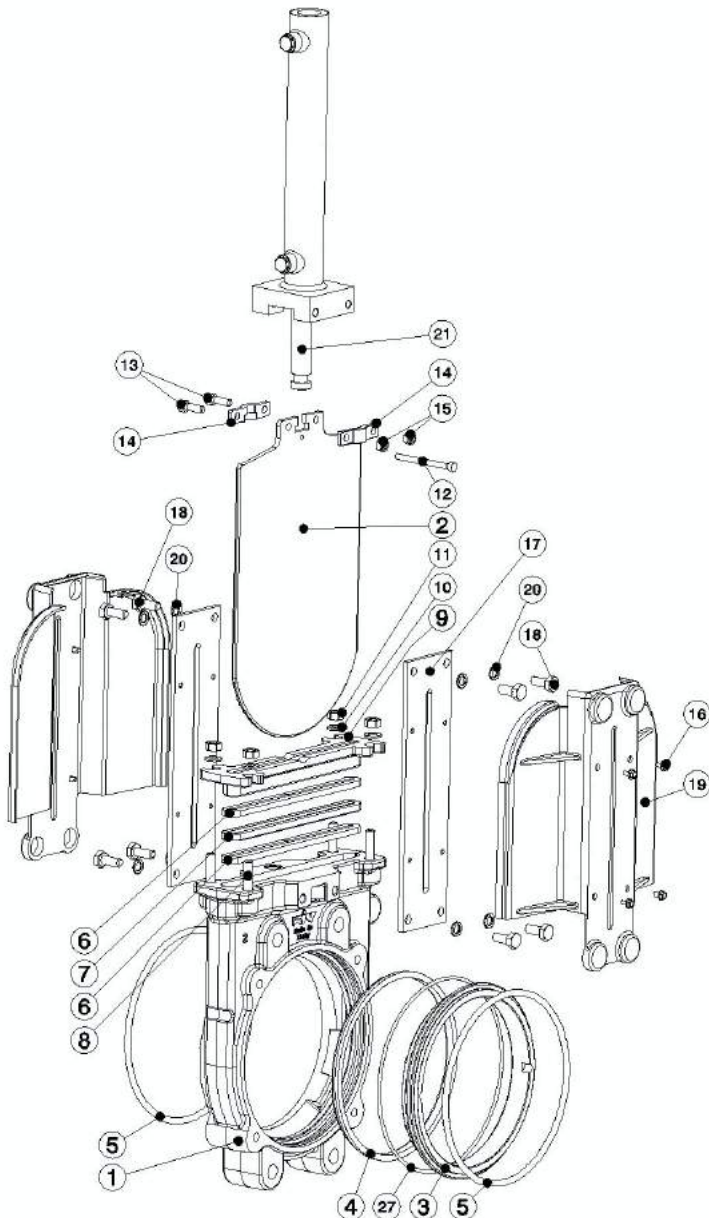


Item	Pos.	Size	Riv Code	Description	Material	
	1	4"	CODFLGV91016	Corpo Body Gehäuse	Ghisa Cast iron Gusseisen	EN JGL250
		5"	CODFLGV91018			
		6"	CODFLGV91019			
		8"	CODFLGV91020			
		10"	CODFLGV91021			
Riv 9818	2	4"	CNISLGG091016	Lama Blade Platte	Acciaio inox Stainless steel Nirostahl	AISI 304
		5"	CNISLGG091018			
		6"	CNISLGG091019			
		8"	CNISLGG091020			
		10"	CNISLGG091021			
Riv 9848	3	4"	AFFGGLZ91016	Anello fermasede Locking ring Sitzring	Ghisa Cast iron Gusseisen	EN JGL415
		5"	AFFGGLZ91018			
		6"	AFFGGLZ91019			
		8"	AFFGGLZ91020			
		10"	AFFGGLZ91021			
Riv 9847	4	4"	GUESLGG00016	Guarnizione sede Seat gasket Sitzdichtung	HNBR	
		5"	GUESLGG00018			
		6"	GUESLGG00019			
		8"	GUESLGG00020			
		10"	GUESLGG00021			
Riv 9859	5	4"	GUOR7805B127	O-Ring flangia O-Ring for flange O-Ring für Flansch	NBR	
		5"	GUOR7805B126			
		6"	GUOR7805B119			
		8"	GUOR7805B118			
		10"	GUOR7805B133			
Riv 9836	6	4"	GUBASLGG00016	Baderna Gland packing Packung	Fibra Fibre Faser	
		5"	GUBASLGG00018			
		6"	GUBASLGG00019			
		8"	GUBASLGG00020			
		10"	GUBASLGG00021			
	7	4"	GUOR7805B128	Guarnizione Gasket Dichtung	NBR	
		5"	GUOR7805B129			
		6"	GUPBSLGG00019			
		8"	GUPBSLGG00020			
		10"	GUOR7805B132			
8		4"-5"-6"-8"-10"	BUT1531KG004	Tirante Stud Bolzen	Acciaio inox Stainless steel Nirostahl	AISI 304
9		4"	PRBAGHV81016	Premibaderna Gland packing box Packungsmutter	Ghisa Cast iron Gusseisen	EN JGL250
		5"	PRBAGHV81018			
		6"	PRBAGHV81019			
		8"	PRBAGHV81020			
		10"	PRBAGHV81021			
10		4"-5"-6"-8"-10"	BURGRIN00008	Rondella Washer	Acciaio inox Stainless steel	AISI 304
11		4"-5"-6"-8"-10"	BUDN531A2004	Dado Nut Schraubenmutter	Acciaio inox Stainless steel Nirostahl	AISI 316
12		4"-5"-6"-8"	BUBR531K0048	Indicatore Position indicator Stellungsanzeige	Acciaio Steel Stahl	
		10"	BUCE581K0032			
13		4"-5"-6"-8"	BUBR531K0071	Vite Screw Schraube	Acciaio Steel Stahl	AISI 304
		10"	BUTE531K0006			
14		4"-5"-6"	ATCNLSLG71019	Attacco lama Blade connection Plattebefestigung	Ottone Brass Messing	CW617N
		8"	ATCNLSLG71020			
		10"	ATCNLSLG91021			
15		4"-5"-6"-8"	BUAU316A4003	Dado Nut Schraubenmutter	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		10"	BUAU316A4005			
16		4"-5"-6"-8"-10"	BUTR531A2002	Vite Screw Schraube	Acciaio inox Stainless steel Nirostahl	AISI 304
17		4"	STFEVSLG0016	Staffa Clamp Bügel	Acciaio Steel Stahl	Zincato Zinc-plated Verzinkt
		5"	STFEVSLG0018			
		6"	STFEVSLG0019			
		8"	STFEVSLG0020			
		10"	STFELSLGZ021			
18		4"-5"-6"-8"	BUTE531K0004	Vite Screw Schraube	Acciaio inox Stainless steel Nirostahl	AISI 304
		10"	BUTE531K0005			
Riv 9846	19	4"	CASPSLGG00016	Carter Casing Schützer	PP	
		5"	CASPSLGG00018			
		6"	CASPSLGG00019			
		8"	CASPSLGG00020			
		10"	CASLSLGGV0021			
20		4"-5"-6"-8"	BURGRIN00008	Rondella Washer Beilagsscheibe	Acciaio inox Stainless steel Nirostahl	AISI 304
		10"	BURGRIN00010			
Riv 162	21	4"	50162000016	Cilindro idraulico Hydraulic jack hydraulischer Zylinder	Doppio effetto Double-acting Doppelwirkender	
		5"	50162000018			
		6"	50162000019			
		8"	50162000020			
		10"	50162000021			
27		4"	GUOR7805B152	O-Ring	NBR	
		5"	GUOR7805B153			
		6"	GUOR7805B149			
		8"	GUOR7805B150			



RubINETTERIE Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 125, Riv 135

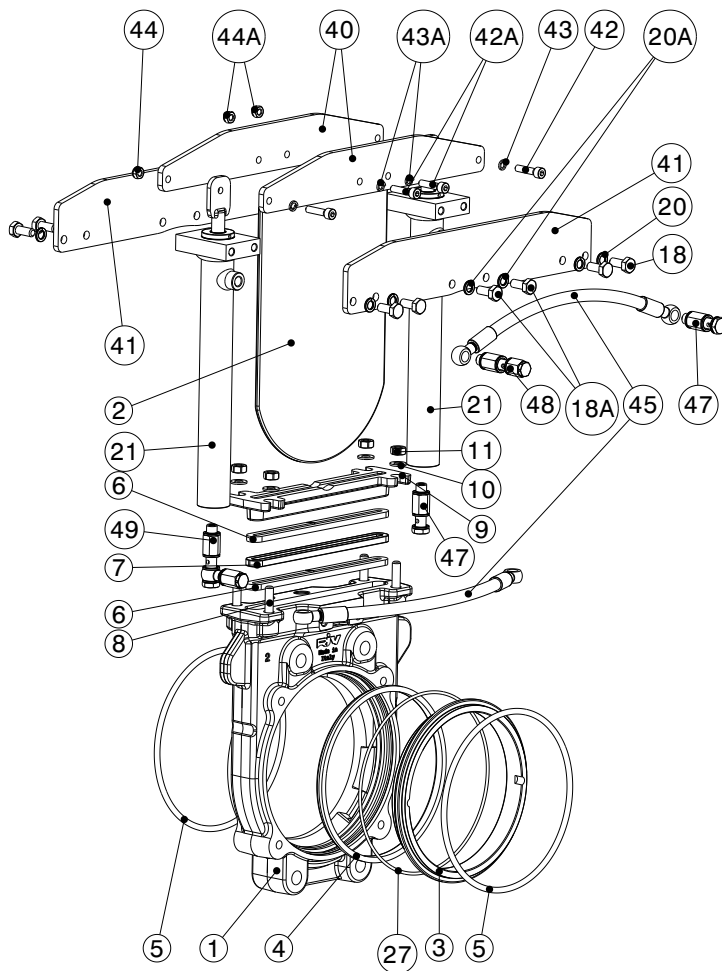


Item	Pos.	Size	Riv Code	Description	Material	
	1	8"	CODFLGV91020	Corpo Body	Ghisa Cast iron	EN JGL250
		10"	CODFLGV91021	Gehäuse	Gusseisen	
Riv 9818	2	8"	CNISLGG091020	Lama Blade	Acciaio inox Stainless steel	AISI 304
		10"	CNISLGG091021	Platte	Nirostahl	
Riv 9848	3	8"	AFFGGLZ91020	Anello fermasede Locking ring	Ghisa Cast iron	EN JGL415
		10"	AFFGGLZ91021	Sitzring	Gusseisen	
Riv 9847	4	8"	GUESLGG00020	Guarnizione sede Seat gasket	HNBR	
		10"	GUESLGG00021	Sitzdichtung		
Riv 9859	5	8"	GUOR7805B118	O-Ring flangia O-Ring for flange	NBR	
		10"	GUOR7805B133	O-Ring für Flansch		
Riv 9836	6	8"	GUBASLGG00020	Baderna Gland packing	Fibra Fibre	
		10"	GUBASLGG00021	Packing	Faser	
	7	8"	GUPBSLGG00020	Guarnizione Gasket	NBR	
				Dichtung		
8		8"	BUT1531KG004	Tirante Stud	Acciaio inox Stainless steel	AISI 304
		10"		Bolzen	Nirostahl	
9		8"	PRBAGHV81020	Prembaderna Gland packing box	Ghisa Cast iron	EN JGL250
		10"	PRBAGHV81021	Packungsmutter	Gusseisen	
10		8"	BURGRIN00008	Rondella Washer	Acciaio inox Stainless steel	AISI 304
		10"	BURGRIN00010	Beilagsscheibe	Nirostahl	
11		8"	BUDN531A2004	Dado Nut	Acciaio inox Stainless steel	AISI 316
		10"		Schraubenmutter	Nirostahl	
16		8"	BUTR531A2002	Vite Screw	Acciaio inox Stainless steel	AISI 304
		10"		Schraube	Nirostahl	
18		8"	BUTE531K0004	Vite Screw	Acciaio inox Stainless steel	AISI 304
		10"	BUTE531K0004	Schraube	Nirostahl	
18A		8"	BUTE531K0004	Vite Screw	Acciaio inox Stainless steel	AISI 304
		10"	BUTE531K0005	Schraube	Nirostahl	
20		8"	BURGRIN00008	Rondella Washer	Acciaio inox Stainless steel	AISI 304
		10"	BURGRIN00008	Beilagsscheibe	Nirostahl	
20A		8"	BURGRIN00008	Rondella Washer	Acciaio inox Stainless steel	AISI 304
		10"	BURGRIN00010	Beilagsscheibe	Nirostahl	
21		8"	F50168000020	Cilindro idraulico Hydraulic jack	Doppio effetto Double-acting	
		10"	F50168000021	hydraulischer Zylinder	Doppelwirkender	
27		8"	GUOR7805B150	O-Ring	NBR	
40		8"	PILADAZ00020	Attacco lama Blade connection	Acciaio Steel	Zincato Zinc-plated
		10"	PILADAZ00021	Plattebefestigung	Stahl	
41		8"	PIATDAZ00020	Staffa Clamp	Acciaio Steel	Zincato Zinc-plated
		10"	PIATDAZ00021	Bügel	Stahl	
42		8"	BUBRS31K0074	Vite Screw	Acciaio Steel	AISI 304
		10"	BUBRS31K0094	Schraube	Stahl	
42A		8"	BUBRS31K0074	Vite Screw	Acciaio Steel	AISI 304
		10"	BUTE531K006	Schraube	Stahl	
43		8"	BURGRIN00006	Rondella Washer	Acciaio inox Stainless steel	AISI 304
		10"	BURGRIN00008	Beilagsscheibe	Nirostahl	
43A		8"	BURGRIN00006	Rondella Washer	Acciaio inox Stainless steel	AISI 304
		10"	BURGRIN00010	Beilagsscheibe	Nirostahl	
44		8"	BUAU316A4003	Dado Nut	Acciaio inox Stainless steel	AISI 316
		10"	BUAU316A4004	Schraubenmutter	Nirostahl	
44A		8"	BUAU316A4003	Dado Nut	Acciaio inox Stainless steel	AISI 316
		10"	BUAU316A4005	Schraubenmutter	Nirostahl	
45		8"	TUFLDA000020	Tubo alta pressione High-pressure hose		
		10"	TUFLDA000021	Hochdruckschlauch		
47		8"		Raccordo idraulico Hydraulic fitting		
		10"		Hydraulikverschraubung		
48		8"		Raccordo idraulico Hydraulic fitting		
		10"		Hydraulikverschraubung		
49		8"		Raccordo idraulico Hydraulic fitting		
		10"		Hydraulikverschraubung		



RubINETTERIE Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 126, Riv 136

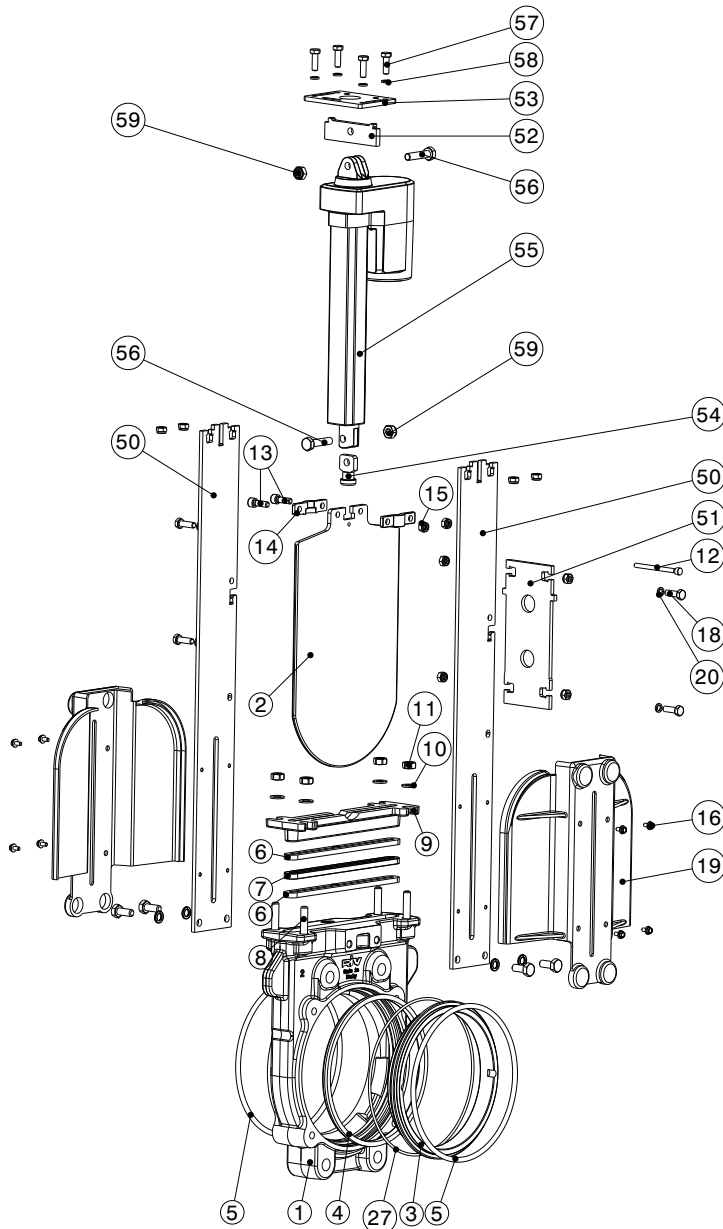

Item	Pos.	Size	Riv Code	Description	Material	
	1	4"	CODFLGV91016	Corpo	Ghisa	EN JGL250
		6"	CODFLGV91019	Body	Cast iron	
		8"	CODFLGV91020	Gehäuse	Gusseisen	
Riv 9818	2	4"	CNISLG091016	Lama	Acciaio inox	AISI 304
		6"	CNISLG091019	Blade	Stainless steel	
		8"	CNISLG091020	Platte	Nirostahl	
Riv 9848	3	4"	AFFGGLZ91016	Anello fermasede	Ghisa	EN JGL415
		6"	AFFGGLZ91019	Locking ring	Cast iron	
		8"	AFFGGLZ91020	Sitzring	Gusseisen	
Riv 9847	4	4"	GUESLGG00016	Guarnizione sede		HNBR
		6"	GUESLGG00019	Seat gasket		
		8"	GUESLGG00020	Sitzdichtung		
Riv 9859	5	4"	GUOR78058127	O-Ring flangia		NBR
		6"	GUOR78058119	O-Ring for flange		
		8"	GUOR78058118	O-Ring für Flansch		
Riv 9836	6	4"	GUBASLG00016	Baderna	Fibra	
		6"	GUBASLG00019	Gland packing	Fibre	
		8"	GUBASLG00020	Packung	Faser	
	7	4"	GUOR78058128	Guarnizione		NBR
		6"	GUPBSLG00019	Gasket		
		8"	GUPBSLG00020	Dichtung		
8		4"-6"-8"	BUTI531KG004	Tirante	Acciaio inox	AISI 304
				Stud Bolzen	Stainless steel	
9		4"	PRBAGHV81016	Premibaderna	Ghisa	EN JGL250
		6"	PRBAGHV81019	Gland packing box	Cast iron	
		8"	PRBAGHV81020	Packungsmutter	Gusseisen	
10		4"-6"-8"	BURGRIN00008	Rondella	Acciaio inox	AISI 304
				Washer	Stainless steel	
				Beilagscheibe	Nirostahl	
11		4"-6"-8"	BUDN531A2004	Dado	Acciaio inox	AISI 316
				Nut	Stainless steel	
				Schraubenmutter	Nirostahl	
12		4"-6"-8"	BUBR531K0048	Indicatore	Acciaio	
				Position indicator	Steel	
				Stellungsanzeige	Stahl	
13		4"-6"-8"	BUBR531K0071	Vite	Acciaio	AISI 304
				Screw	Steel	
				Schraube	Stahl	
14		4"-6"	ATCNLSG71019	Attacco lama	Ottone	CW617N
		8"	ATCNLSG71020	Blade connection	Brass	
				Plattebefestigung	Messing	
15		4"-6"-8"	BUAU316A4003	Dado	Acciaio	Zincato
				Nut	Steel	
				Schraubenmutter	Stahl	Verzinkt
16		4"-6"-8"	BUTR531A2002	Vite	Acciaio inox	AISI 304
				Screw	Stainless steel	
				Schraube	Nirostahl	
18		4"-6"-8"	BUTE531K0004	Vite	Acciaio inox	AISI 304
				Screw	Stainless steel	
				Schraube	Nirostahl	
Riv 9846	19	4"	CASPSLG00016	Carter		PP
		6"	CASPSLG00019	Casing		
		8"	CASPSLG00020	Schützer		
20		4"-6"-8"	BURGRIN00008	Rondella	Acciaio inox	AISI 304
				Washer	Stainless steel	
				Beilagscheibe	Nirostahl	
27		4"	GUOR78058152	O-Ring		NBR
		6"	GUOR78058149			
		8"	GUOR78058150			
50		4"	PILAAEZ0016	Staffa	Acciaio	Zincato
		6"	PILAAEZ0019	Clamp	Steel	
		8"	PILAAEZ0020	Bügel	Stahl	
51		4"	PIRIATEZ0016	Staffa	Acciaio	Zincato
		6"	PIRIATEZ0019	Clamp	Steel	
		8"	PIRIATEZ0020	Bügel	Stahl	
52		4"	PISUAETZ0000	Staffa	Acciaio	Zincato
		6"	PISUAETZ0000	Clamp	Steel	
		8"	PISUAETZ0000	Bügel	Stahl	
53		4"	PIISATEZ0000	Staffa	Acciaio	Zincato
		6"	PIISATEZ0000	Clamp	Steel	
		8"	PIISATEZ0000	Bügel	Stahl	
54		4"	ADFIATEZ0000	Adattatore	Acciaio	Zincato
		6"	ADFIATEZ0000	Adapter	Steel	
		8"	ADFIATEZ0020	Adapter	Stahl	
55		4"	ATELGL000016	Attuatore		12V
		6"	ATELGL000019	Actuator		
		8"	ATELGL000020	Aktuator		
56		4"	BUTE561KG093	Vite	Acciaio	Zincato
		6"	BUTE561KG093	Screw	Steel	
		8"	BUTE561KG093	Schraube	Stahl	
57		4"	BUTE561KG067	Vite	Acciaio	Zincato
		6"	BUTE561KG067	Screw	Steel	
		8"	BUTE561KG067	Schraube	Stahl	
58		4"	BURGRIN00006	Rondella	Acciaio inox	AISI 304
		6"	BURGRIN00006	Washer	Stainless steel	
		8"	BURGRIN00006	Beilagscheibe	Nirostahl	
59		4"	BUAU571KG004	Dado	Acciaio	Zincato
		6"	BUAU571KG004	Nut	Steel	
		8"	BUAU571KG004	Schraubenmutter	Stahl	



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> **YOU need
the BEST**

Special prescriptions

>> ATEX valve maintenance

ATEX valves need to be checked more frequently than normally installed valves. It is recommended to check the condition of the gate valve at least once a month and to keep it clean, as it is necessary to avoid the dust build-up on the surfaces. Any dust that may be present should not be removed mechanically but vacuumed with suitable ATEX certified equipment. Check the absence of oxidation or other problems that could jeopardise the correct and safe operation of the gate valve.

The maintenance of ATEX valves must be carried out only by specialised personnel properly trained to work in areas with possible presence of explosive atmosphere.

It is anyway advisable, if possible, to uninstall the valve for the performance of maintenance operations in a safe area. After each maintenance operation, the valve must be tested as it was after the first installation, before it is put back into service.

After each maintenance operation, before putting the valve back into operation, it is necessary to check the electrical continuity with the pipeline by carrying out a test according to UNI EN 12266-2 Annex B points B.2.2 and B.2.3.1.

Disposal

 At the end of the gate valve service life, it is recommended to dispose of it at specialised material recycling facilities, scrupulously complying with the law in force in the country of installation.

Any operating fluid or oils contained in the valve must be disposed of in compliance with any provisions of law.

The same disposal policy applies to all parts replaced during the usual maintenance cycle of the valve.

✓ RIV SpA is not responsible for the improper disposal of materials and fluids by the user, installer or maintainer.

RIV Rubinetterie Italiane Velatta S.p.A
Via delle Acacie 8 Zona Industriale D4
P. O.Box 64
28075 GRIGNASCO (NO) ITALY
Tel +39 0163 4151
Fax +39 0163 411914

Capitale sociale € 516.000 i.v.
Reg. Imprese di Novara N° 00469610026
R.E.A. di Novara N° 170397
Numero Meccanografico NO009263
Codice Fiscale 00469610026
Partita IVA IT 01399720034

E-mail riv-vg@riv-vg.com
Web www.riv-vg.com



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 126 Riv 136

GLadio

- >> Alimentazione: 12 V CC
- >> Potenza: 132 W
- >> Corrente assorbita: 11 A
- >> Grado di protezione motore: IP 69K
- >> Forza apertura: 6000 N
- >> Forza chiusura: 6000 N
- >> Velocità Chiusura/Apertura Circa 4mm/s
- >> Temperatura operativa: da -5°C a +45°C (da 23°F a 113°F)
- >> Temperatura operativa a pieno regime: da +5°C a +35°C (da 41°F a 95°F)
- >> Ciclo di lavoro: 25% alla temperatura di +25°C (77°F)
Tempo di pausa pari ad almeno il triplo del tempo di funzionamento, (Es. 30 secondi ON seguiti da almeno 90 secondi OFF), Max. 2 minuti di uso continuativo
- >> Lunghezza cavo alimentazione e segnali: 5 m
- >> Feedback di posizione analogico con potenziometro
- >> Finecorsa integrati

CONNESSIONI

- >> Cablaggio dei cavi di alimentazione aventi sezione di 2,5mm²

✓ Chiusura della saracinesca
Cavo **Nero** - **NEGATIVO**
Cavo **Rosso** + **POSITIVO**

✓ Apertura della saracinesca
Cavo **Nero** + **POSITIVO**
Cavo **Rosso** - **NEGATIVO**

- >> Cablaggio cavi del feedback (potenziometro) aventi sezione di 0,75mm²

Il cavo Nero ed il cavo Bianco sono gli estremi della resistenza

Il cavo Rosso rileva la variazione di resistenza

- ✓ La resistenza misurata tra il cavo Rosso ed il Cavo Nero aumenta chiudendo la saracinesca e diminuisce aprendo la saracinesca.
- ✓ La resistenza misurata tra il cavo Rosso ed il cavo Bianco diminuisce chiudendo la saracinesca ed aumenta aprendo la saracinesca.

I finecorsa integrati sono cablati internamente e tolgono alimentazione al motore solo in prossimità dei finecorsa meccanici dell'attuatore.

Durante il normale funzionamento della saracinesca il motore deve essere arrestato, sia in apertura che in chiusura, in funzione della segnalazione di posizione ricevuta dal potenziometro.

La circuitazione deve prevedere anche due limitazioni di corrente, una in apertura ed una chiusura, che provvedano a togliere alimentazione all'eventuale raggiungimento dell'assorbimento massimo previsto (11 Ampere).



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Riv 126 Riv 136

GLADIO

- >> Power supply: 12 V DC
- >> Power: 132 W
- >> Current: 11 A
- >> Motor protection grade: IP 69K
- >> Opening force: 6000 N
- >> Closing force: 6000 N
- >> Closing/opening speed: About 4mm/s
- >> Operating temperature: from -5°C to +45°C (from 23°F to 113°F)
- >> Operating temperature at full performance: from +5°C to +35°C (from 41°F to 95°F)
- >> Duty cycle: 25% at temperature of +25°C (77°F)
Pause time equal at least three times the operating time,
(Ex. 30 seconds ON followed by at least 90 seconds OFF)
Max. 2 minutes of continuous use
- >> Power & signals cable length: 5 m
- >> Analogic position feedback with potentiometer
- >> Integrated limit switches

WIRING

- >> Power cable wiring 2,5mm² section

✓ Knife gate valve closing:
Black cable to - **NEGATIVE** polarity
Red cable to + **POSITIVE** polarity

✓ Knife gate valve opening:
Black cable to + **POSITIVE** polarity
Red cable to - **NEGATIVE** polarity

- >> Feedback cable wiring (potentiometer) 0,75mm² section

Black and White cable are the ends of the resistance

Red cable detects resistance variation

- ✓ The resistance detected between the Red and the Black cable increases by closing the knife gate valve and decreases by opening the knife gate valve.
- ✓ The resistance detected between the Red and the White cable decreases by closing the knife gate valve and increases by opening the knife gate valve.

The integrated limit switches are internally wired and shut-off the power when the actuator reaches one of the two mechanical stroke-end.

During normal operation of the gate valve the power must be shut-off, both in opening and closing position and in relation to the position signal received from the potentiometer.

The circuit must also provide two limitations of the current flow, both in opening and closing direction, that could shut-off the power if the motor absorption reaches the maximum acceptable level (11 Ampere).



Rubinetterie Italiane Velatta SpA
— since 1950 —



>> YOU need
the BEST

Gladio

RIV126

Multi-functional wafer knife gate valve with 12V DC electrical linear actuator for fluid dosing

Saracinesca a lama multifunzionale tipo wafer con attuatore elettrico lineare 12V CC per il dosaggio del fluido

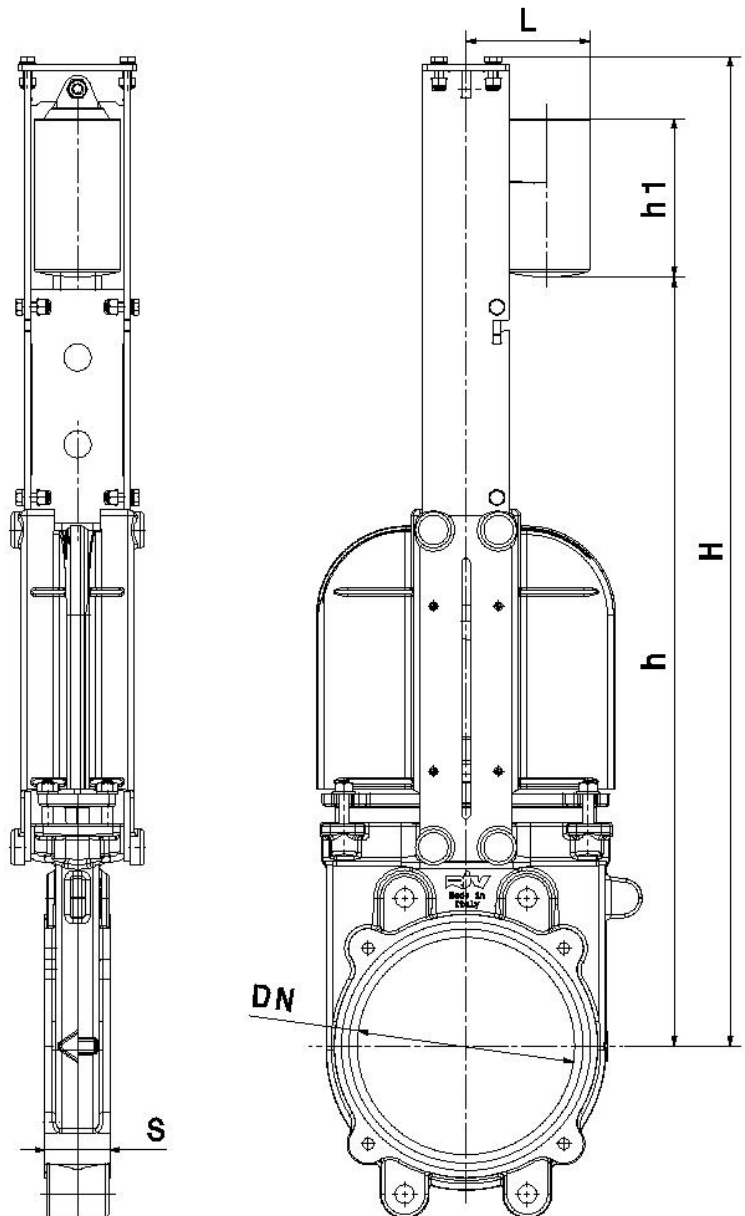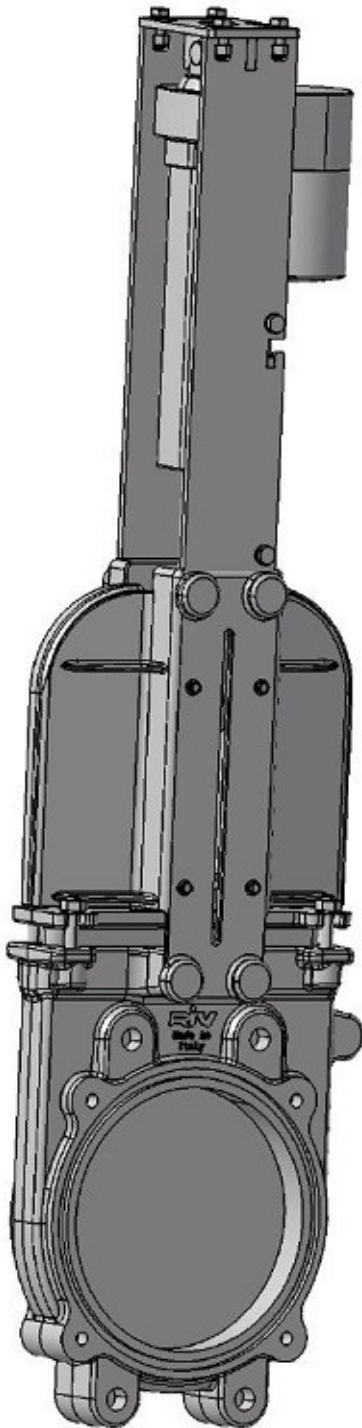

DN	S	H	h	h1	L
4"	50	665	462	145	114
6"	60	769	566	145	114
8"	60	911	708	145	114

TECHNICAL DATA

- | | |
|--|---|
| >> Power supply:
12V Direct Current | >> Alimentazione:
12V Corrente Continua |
| >> Protection:
IP69K | >> Protezione:
IP69K |
| >> Operational temperature range:
-5 °C / +45 °C | >> Campo temperature operative:
-5 °C / +45 °C |
| >> Operational temperature range at full performance:
+5 °C / +35 °C | >> Campo temperature operative a pieno regime:
+5 °C / +35 °C |
| >> Duty cycle:
25% at temperature of +25 °C
Pause time equal at least three times the operating time
(Ex. 30 seconds ON followed by at least 90 seconds OFF)
Max. 2 minutes of continuous use | >> Ciclo di lavoro:
25% alla temperatura di +25 °C
Tempo di pausa pari ad almeno il triplo del tempo di funzionamento
(Es. 30 secondi ON seguiti da almeno 90 secondi OFF)
Max. 2 minuti di uso continuativo |
| >> Power Consumption:
11 Ampere | >> Assorbimento:
11 Ampere |
| >> Opening force:
6.000N Max | >> Forza apertura:
6.000N Massimi |
| >> Closing force:
6.000N Max | >> Forza chiusura:
6.000N Massimi |
| >> Closing/opening speed:
About 4mm/s | >> Velocità Chiusura/Apertura:
Circa 4mm/s |
| >> Analogic position feedback with potentiometer | >> Feedback di posizione analogico con potenziometro |
| >> Integrated limit switches | >> Finecorsa integrati |
| >> Power & signals cord length 5m | >> Lunghezza cavo alimentazione e segnali 5m |



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

Power cable wiring (2,5mm² section)

Knife gate valve closing

- Black cable to NEGATIVE polarity of 12VDC
- Red cable to POSITIVE polarity of 12VDC

Knife gate valve opening

- Black cable to POSITIVE polarity of 12VDC
- Red cable to NEGATIVE polarity of 12VDC

Feedback (potentiometer) cable wiring (0,75mm² section)

Black and White cable are the ends of the resistance

Red cable detects resistance variation

- The resistance detected between the Red and the Black cable increases by closing the knife gate valve and decreases by opening the knife gate valve.
- The resistance detected between the Red and the White cable decreases by closing the knife gate valve and increases by opening the knife gate valve.

The integrated limit switches are internally wired and shut-off the power when the actuator reaches one of the two mechanical stroke-end. During normal operation the power must be shut-off, both in opening and closing direction and in relation to the position signal received from the potentiometer. The circuit must also provide two limitations of the current flow, both in opening and closing direction, that shut-off the power if the motor absorption reach the maximum acceptable level (11 Ampere).

Cablaggio dei cavi di alimentazione aventi sezione di 2,5mm² :

Chiusura della saracinesca

- Cavo Nero NEGATIVO 12VDC
- Cavo Rosso POSITIVO 12VDC

Apertura della saracinesca

- Cavo Nero POSITIVO 12VDC
- Cavo Rosso NEGATIVO 12VDC

Cablaggio cavi del feedback (potenziometro) aventi sezione di 0,75mm²

Il cavo Nero ed il cavo Bianco sono gli estremi della resistenza

Il cavo Rosso rileva la variazione di resistenza

- La resistenza misurata tra il cavo Rosso ed il Cavo Nero aumenta chiudendo la saracinesca e diminuisce aprendo la saracinesca.
- La resistenza misurata tra il cavo Rosso ed il cavo Bianco diminuisce chiudendo la saracinesca ed aumenta aprendo la saracinesca.

I finecorsa integrati sono cablati internamente e tolgono alimentazione al motore solo in prossimità dei finecorsa meccanici dell'attuatore. Durante il normale funzionamento della saracinesca il motore deve essere arrestato, sia in apertura che in chiusura, in funzione della segnalazione di posizione ricevuta dal potenziometro. La circuitazione deve prevedere anche due limitazioni di corrente, una in apertura ed una chiusura, che provvedano a togliere alimentazione all'eventuale raggiungimento dell'assorbimento massimo previsto (11 Ampere).




Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

When red wire connects to positive pole, black wire connects to negative pole, the inner tube extends.


Collegando il cavo nero 14AWG al polo negativo e quello rosso 14AWG al polo positivo la saracinesca viene chiusa.

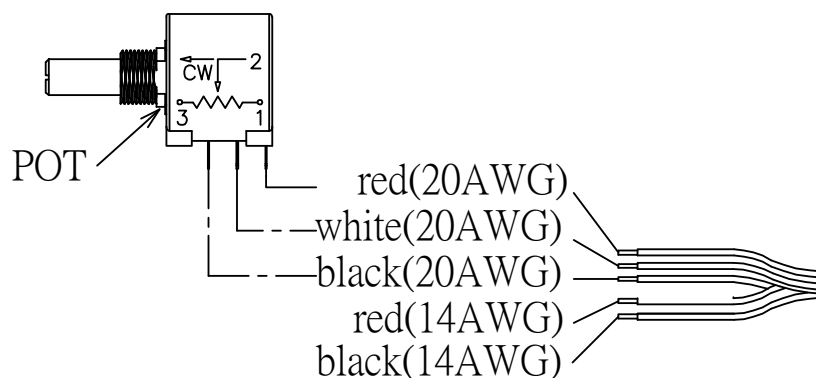



Rubinetterie Italiane Velatta SpA
— since 1950 —

>> YOU need
the BEST

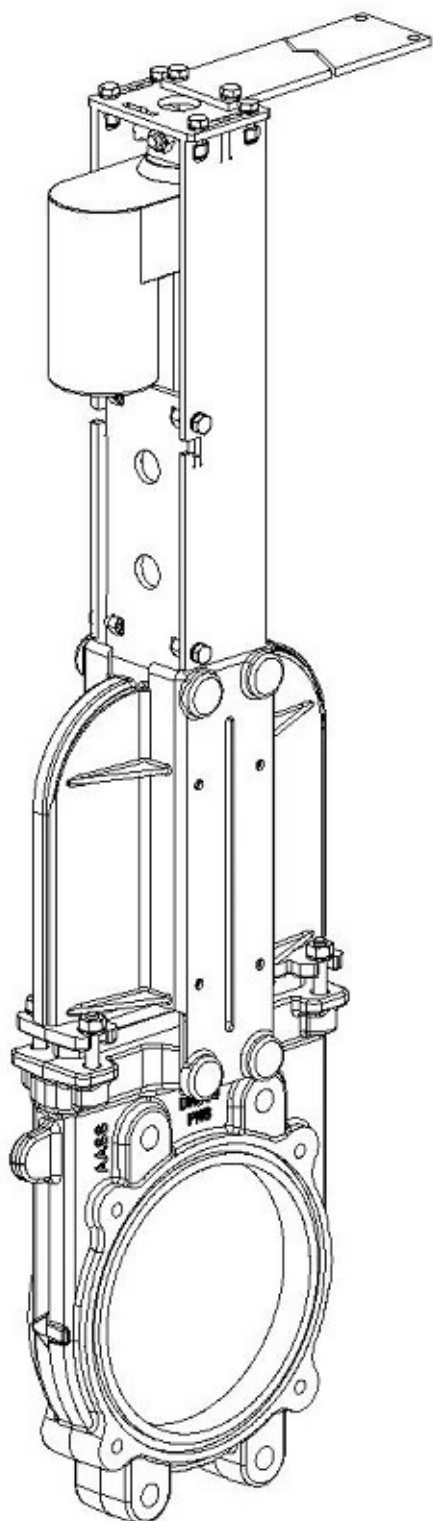

In order to avoid vibration and stress which can damage the gate valve, after having properly installed the gate valve, we suggest to fix the actuator to the tank or to a suitable solid part by a crossbar.

(crossbar not included)

Per evitare vibrazioni e sollecitazioni indesiderate che possono danneggiare la saracinesca, dopo averla correttamente installata, consigliamo di fissare l'attuatore tramite una staffa alla cisterna o ad una parte solida fissa.

(staffa non inclusa)